 
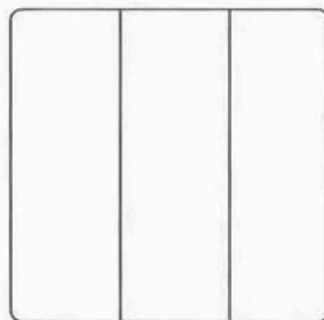 
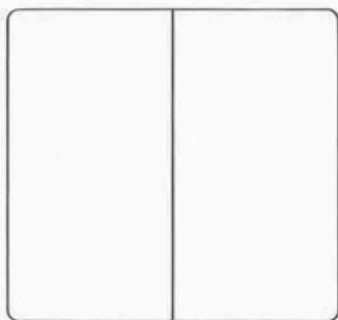 





Self generating electricity wireless transmitter 86 Switch

Self generating electricity , Bringing Green intelligent life.

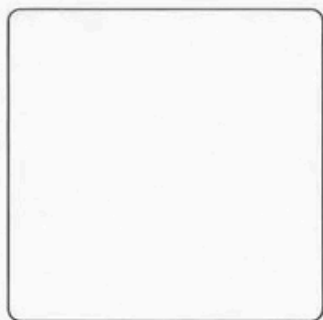

Self generating electricity wireless transmitter 86 Switch Series are without any electric wire and battery and safe and waterproof and easy to install and use which can be even operated with wet hands.86 Switch Series use innovative self generating electricity technology.Collecting the energies at the moment of pressing is used to transmit wireless signals, which freed from the trouble of wiring or battery replacement. They need to be used together with the corresponding controller, which can be easily used in various scenarios such as single control switch, double control switch, multi control switch, wireless doorbell, etc.

   86 Switch Series transmitter Parameter specification

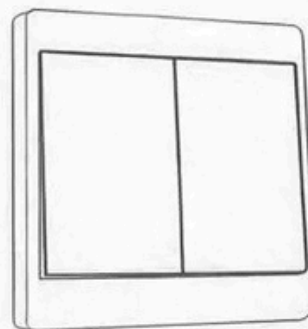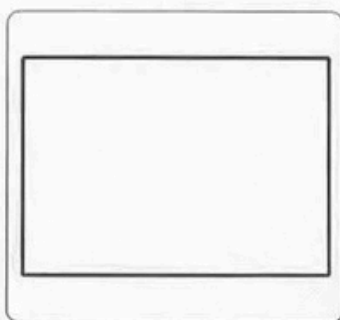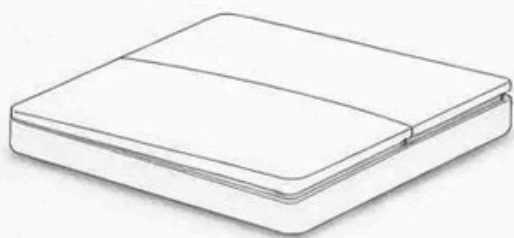


Note: The transmission distance is affected by the wall and may differ from the actual measured value.

Type of work:	Reset / seesaw	Power mode:	Kinetic energy self-generation
working frequency	433MHZ	Communication mode	FSK/OOK
Number of buttons	1-3key	Color	White or custom made
weight	32g-62g	Switching cycles	>100,000 times
Product Size:	86mm*86mm*H17mm	Emission distance:	200M (outdoor) · 50M (indoor)
Executive standard	NE 61058-1 : 2002+A2 : 2008 : GB14536.1-2008		


86 Switch Series transmitter application scenarios

 Combination One

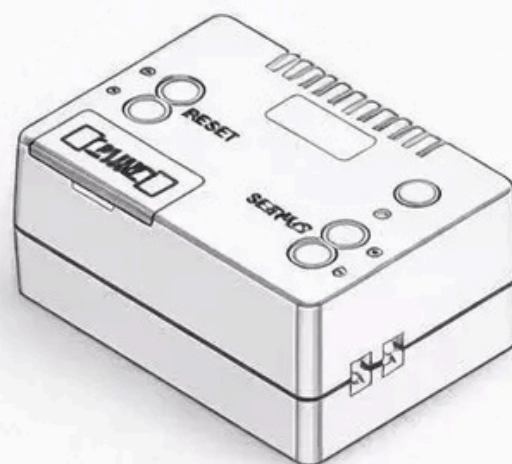


Equipped with standard controller or mini controller, it can be changed into a movable switch in seconds, which is convenient and easy to use. Realize single control, double control and multi control.

 Combination Two

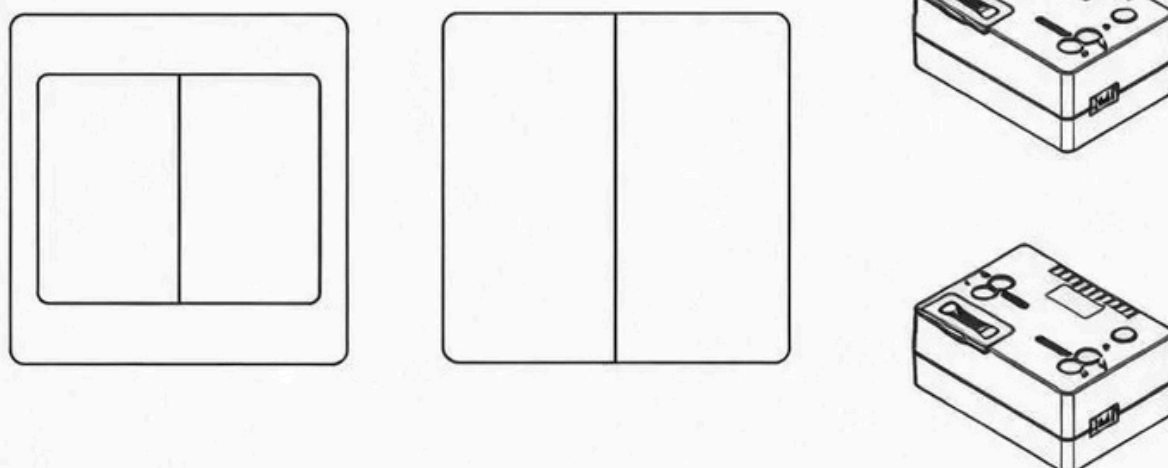

Easy to achieve two-way dual control, free combination!

 Combination Three


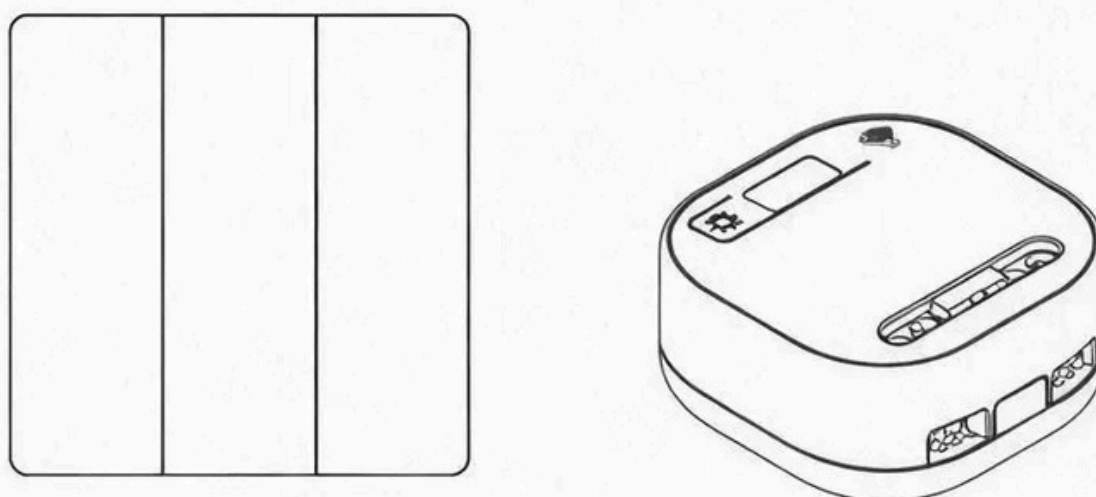


86 switch series can control three ways combination in one time. Do what you want.

Receiving part:

(Wiring part) :

  As shown in the figure, please pay attention to turn off the power before wiring. Non-professionals should not electrify the wiring.

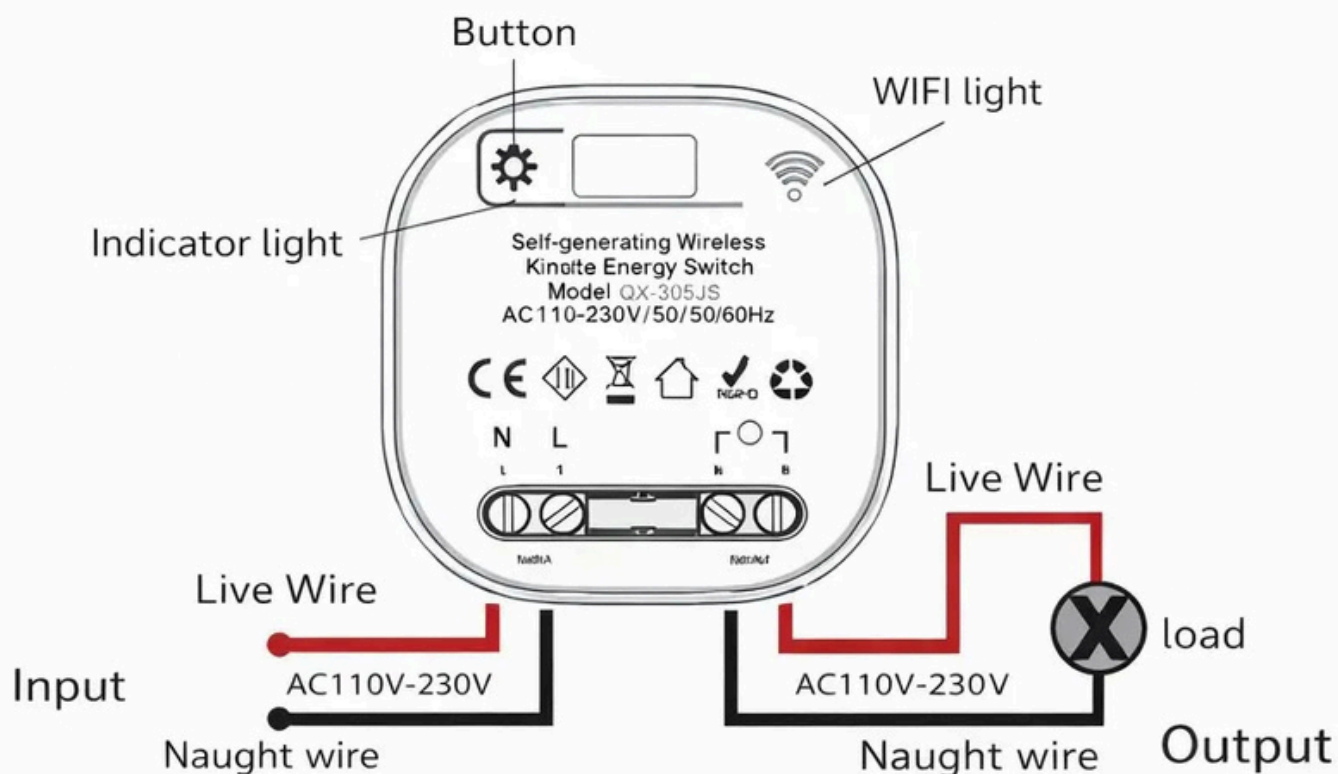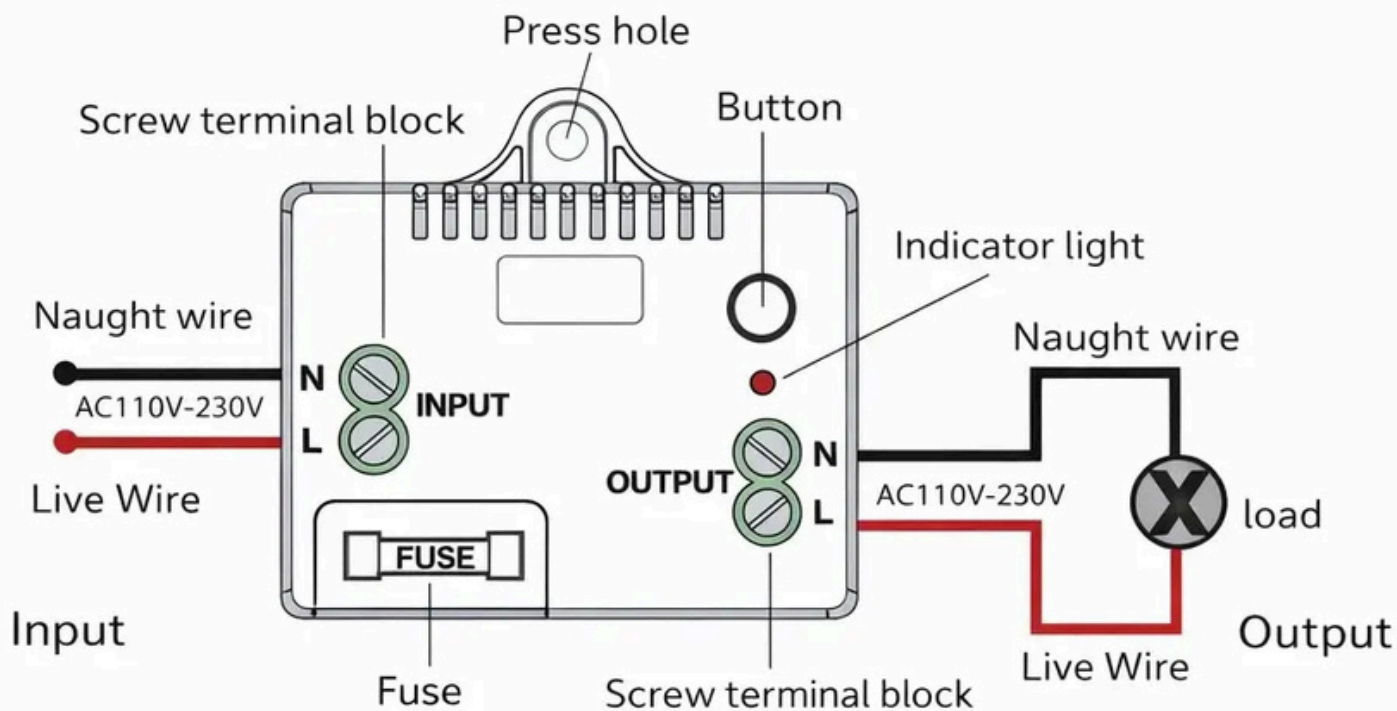

Noted: Non-professionals should not electrify the wiring, please pay attention to turn off the power before wiring. It is better to invite relevant professional qualification personnel for construction.

Operating instructions:

<Pairing>: If the receiver is in the power-on state, the indicator light is always on, it is in the pairing mode (no switch is saved), and pressed the button 2 times, the indicator light flashes and the pairing code is successful. It can be equipped with up to 5 switches. You can also pair it yourself as shown below. When the receiver has been equipped with 5 switches, the new switch will automatically replace the first switch.

Note: As long as the power is on, press and hold the button for 3 seconds at any time to enter the pairing mode. If there is no pairing switch within 10 seconds, the pairing mode will be automatically ended. You can also press the button on the receiver to end the pairing. Usually press the button briefly to turn it on or off.

<Clear Pair Code> If you press and hold the button on the receiver as shown in the figure until the indicator light is on and flashes 3 times, all the pairs are cleared

Default On/Off>:

After the normal use of this product, the home suddenly loses power, and the receiver is turned on or off when the call comes in can be set according to your preference.

 
1. Setting of incoming light on state, the home suddenly loses power: short press the button on the receiver with the light on and keep it for 10 seconds without any other operation, setup complete.

2. Setting of incoming light off state, the home suddenly loses power: short press the button on the receiver with the light off and keep it for 10 seconds without any other operation, setup complete.

Installation instructions:

1) 86 switch series can be placed or moved at will, or fixed to your favorite location. Please try it in the desired fixed position before fixing, and it will not affect the normal use and then fix it. The fixing method is as follows:

double-sided stickers, as shown in the figure: stick the bottom surface of the switch with a double-sided sticker, and attach the other side to your favorite place. Special note: Please avoid installing on metal objects (iron doors, iron windows, etc.) to avoid affecting the launch distance. Please try if it is feasible before fixing.

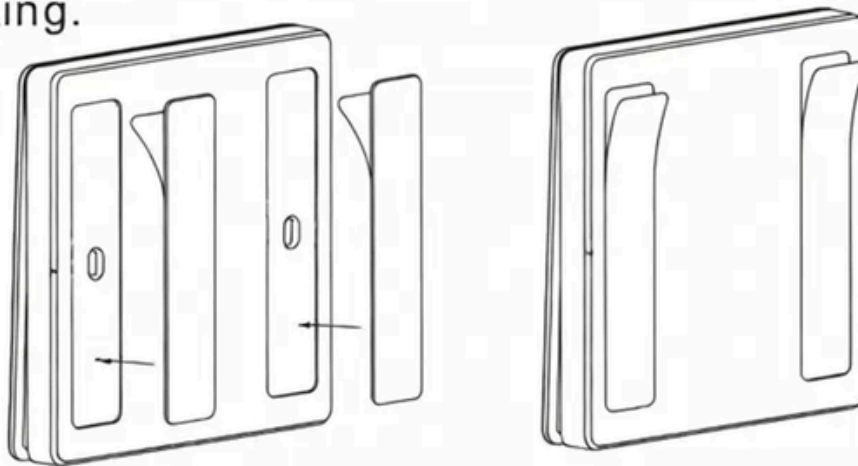

2) As shown in the figure, it can be fixed by screwed. Put it in the fixed position and try if it is feasible, Open the upper cover with a screwdriver, draw the positioning point, then punch holes on the wall with professional tools, install rubber plug, and fix the switch to the wall with screws.

Receiver fixed mode:

As shown in the figure, it can be fixed by double-sided paste or screw

