 





Xlazy Home

# ***User manual***
 
## **1. Product description**

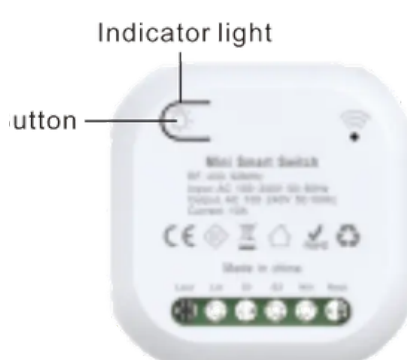

Rf433 Receiver 1

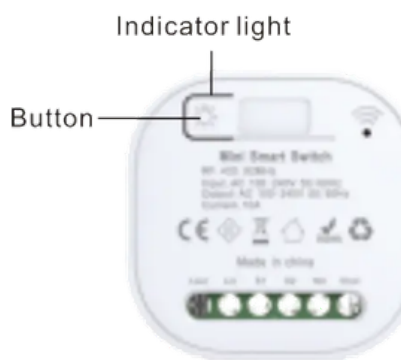

Rf433 Receiver 2



Self generating remote switch

## **2. Product technical parameters**

Receiver specifications:

 
- 1) Working voltage: AC100-240V  
50/60Hz
- 2) Frequency: 433.92MHz
- 3) Maximum current: 10A/16A
- 4) Receiver 1 size: 49 \* 49 \* 23mm  
Receiver 2 size: 49 \* 48 \* 23mm

## Self-powered remote control switch specifications:

- 1) Working voltage: no need battery
- 2) Working frequency: 433MHZ
- 3) Standby power consumption: 0uA
- 4) Transmitting power: < 10mW
- 5) Working mode: wireless remote control
- 6) Working temperature: -10°C ~+70°C
- 7) Size: 86\*86\*16.5(mm)
8. Transmission distance:  
100M (outdoor), 30M (indoor)  
The transmission distance is affected by the wall barrier and may be different from the actual measured value.


### 3. Product installation

Self-powered remote control switch:  
It can be placed or moved at will, or it can be fixed to your favorite position. Use double-sided stickers on one side to stick to the bottom of the switch, and the other side to stick it where you like.

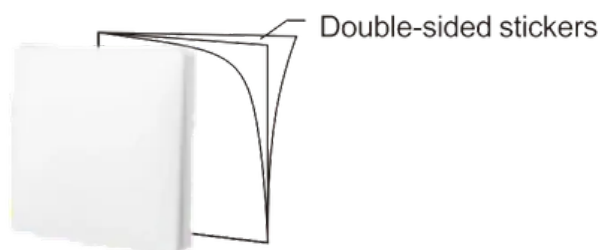


The receiver can be fixed with double-sided tape and wired according to the schematic diagram, without distinguishing between neutral and live wires, but the input and output cannot be reversed. (Attention: Please try not to install it in metal containers to prevent the working distance from getting closer.)


### The wiring for 1 way control

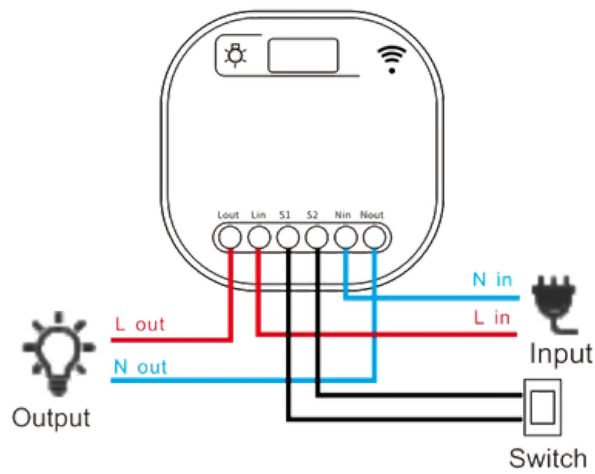 

### The wiring for 2 way control

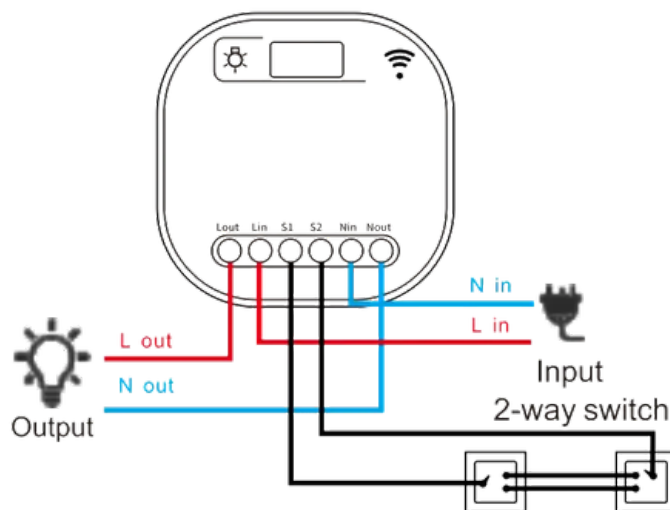 

### The wiring for other home appliances

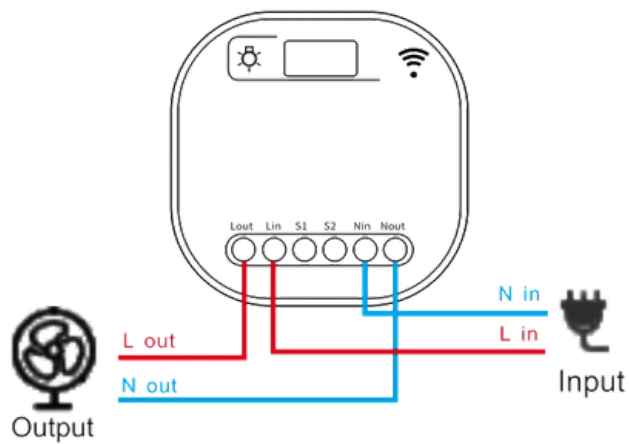 

Warning: Please disconnect the power supply before wiring, and do not operate with power on. S1 and S2 can only be connected to the two ends of a single fire wall switch and cannot be connected to strong electricity. They can be left unconnected unless necessary.

## 4. Learning settings

The set has been paired at the factory. If you need to make changes, please refer to the following steps.

### Pairing method 1 (self-locking)

Press and hold the receiver button for 3 seconds. When the blue indicator light comes on, press the remote control switch and the indicator light flashes to indicate successful pairing.

### Pairing Method 2 (Interlocking)

Attention: Interlocking pairing requires two switches. Press and hold the receiver button for 6 seconds. When the blue indicator light comes on, pressing the first switch only turns on the light, and pressing the second switch only turns off the light. Pairing is complete.

### Clear code

Press and hold the receiver button for 10 seconds, and the blue indicator light will flash rapidly three times, indicating successful code clearing.

## 5. Cautions

- 1) The load power cannot exceed the rated power of the product.
- 2) Please avoid interference sources such as metal masks, large electronic devices, and electromagnetic fields to prevent the product from shortening its working distance or malfunctioning.
- 3) Please do not disassemble the product without authorization, otherwise you will not be able to enjoy warranty services.