



Xlazy Home


User manual for wireless doorbell

Before using this product, please read the product manual carefully and follow the instructions for installation and usage.


1. Product Features

This product is self-powered version, with no need for wiring and simple installation. The principle of a self generating transmitter is to drive wireless signals by pressing to generate electricity, which is waterproof, battery free, and environmentally friendly. At the same time, it also has an AB door function, which can set different ringtones for each transmitter, making it convenient and practical.

2. Product Diagram

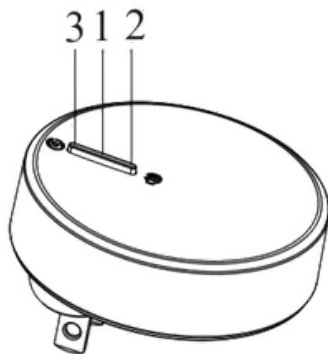

Receiver

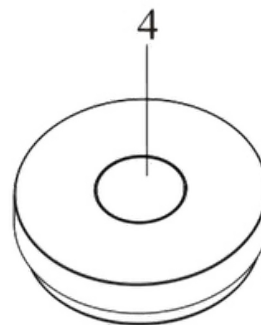

Self-power Transmitter

1 Indicator

2 Volume button and back

3 Pairable button and music selection button

4 Transmitter button

3. Technical Specifications

Technical Specifications	Doorbell Transmitter	Doorbell Receiver
Power Supply	Self-Powered	Ac100V-240V 50/60HZ
Power Consumption		0.25W
Ringtone		60 ringtones
Weight	32g	US/CN: 43g EU: 46g
Transmission Distance	Indoor $\geq$ 30 meters, Outdoor $\geq$ 150 meters	
RF Frequency	433MHZ	
Dimensions	$\varnothing$ 64*20mm	$\varnothing$ 64*20mm
Ringtone Volume		$\geq$ 50dB (about 1m)
Operating Temperature	-20 $^{\circ}$ C ~ +60 $^{\circ}$ C	-10 $^{\circ}$ C ~ +45 $^{\circ}$ C

4. Usage Instructions

a. Pairing

Press and hold the pairing button for 3 seconds. The indicator light will stay on, indicating pairing mode. The transmitter's indicator light will flash once to indicate successful pairing. Repeat this process for up to 10 transmitters. Additional transmitters will overwrite pairing information starting from the first transmitter.

Remind: When pairing two or more transmitters, you can set different ringtones. First, select the desired ringtone and then proceed with the pairing process. The learned ringtone will be the current one, and to change the ringtone, the pairing process must be repeated.

b. Code Clearing

Within the first minute of powering on the receiver, press and hold the pairing button for 6 seconds. Keep holding until the blue light stays on, then release. The indicator light will flash three times, indicating successful code clearing.

c. Return to the First Ringtone


While the receiver is powered on, press and hold the "Volume Adjust and Return" button to return to the first "Ding Dong" ringtone.

d. Volume Adjustment

While the receiver is powered on, short press the "Volume Adjust and Return" button to cycle through the volume levels: high, medium, low, and mute.

5. Transmitter Installation

As shown in the figure, use double-sided adhesive to stick one side to the bottom of the transmitter and the other side to the best position for the signal.

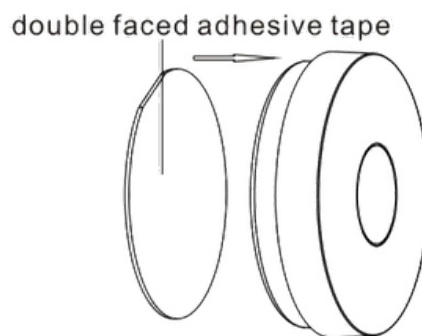

Special reminder:

Please avoid installing on metal objects (iron doors, iron windows, security doors). The signal distance will be affected by the brightness. Please test before fixing. Angle and height changes may also affect signal strength.

6. Troubleshooting and Solutions

Doorbell Doesn't Ring:

- Check if the receiver is properly plugged in and the socket has power.
- Confirm if pairing is successful; consider clearing the code and retrying the pairing process.

Limited Transmission Distance:

- Metal objects like iron doors or metal sheets can block wireless signals; avoid placing the transmitter directly on metallic surfaces.
- Walls, floors, and security doors can also affect transmission distance; mount the transmitter in an area with strong signals.
- Other wireless signal interference sources have an impact, etc