



 
Xlasy Home

Manual of Self-powered Wireless Doorbell

Note: Please read this manual carefully before using the product, and install and use the product according to the instructions.

Product Descriptions:

1. Product Features: Battery-free wireless doorbell. Generating power by pressing to drive wireless signals. No batteries needed. No Wiring. Simple installation. Green and Eco-friendly.
2. Product Diagram:

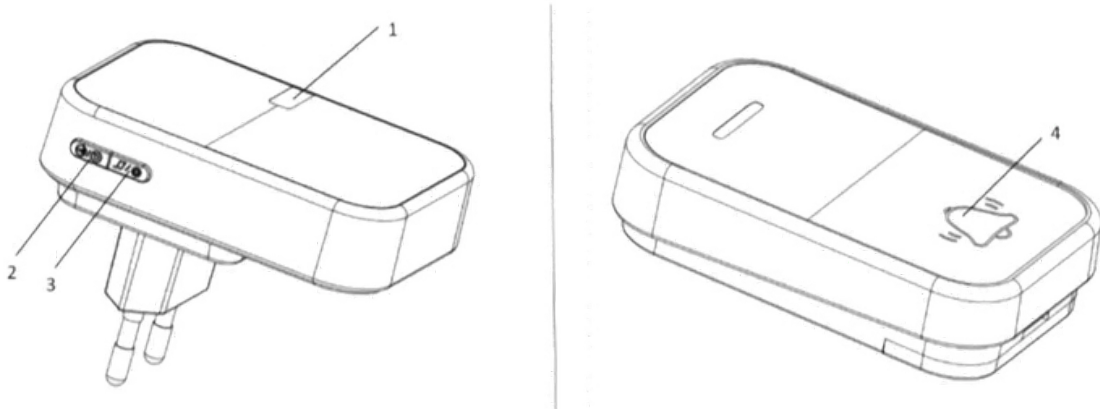

1 指示灯/Indicator

2 音量调节及返回/Volume button and back

3 配对及选曲/Pairing button and chime selection button

4 发射器按钮/Transmitter button

3. Parameters:

Technical parameters of self-powered Doorbell

Parameters	Transmitter	Receiver
Power Supply	Self-powered	AC100V-230V 50/60HZ
Power Consumption		0.25W
Chimes		38 chimes
Weight	31g	US: 53.4g EU: 55.9g US/CN: 53.4g
Transmission Distance	Indoor distance $\geq 50M$ In the open area $\geq 150M$	
RF Frequency	433MHZ	
Product Size	L66mm*W40mm*H20mm	L78mm*W54mm*H20mm
Volume		$\geq 50dB$ (at 1 meter)
Working Temperature	$-20^{\circ}C \sim +60^{\circ}C$	$-10^{\circ}C \sim +45^{\circ}C$

 
Instructions:

1. Paring: When the receiver is powered on, press and hold the pairing button, and if the indicator light is constantly on, it is in pairing mode. Then press the transmitter button, the indicator light flashes once to indicate that the pairing is successful. The receiver can be paired with up to 5 transmitters. When the receiver has been paired with 5 transmitters, adding a new transmitter will

automatically replace the first one.

2. Schematic Description


- 1 Within 1 minute after the receiver is powered on, press and hold the pairing button for 3 seconds.
- 2 The indicator light is constantly on indicates that it is in pairing mode.

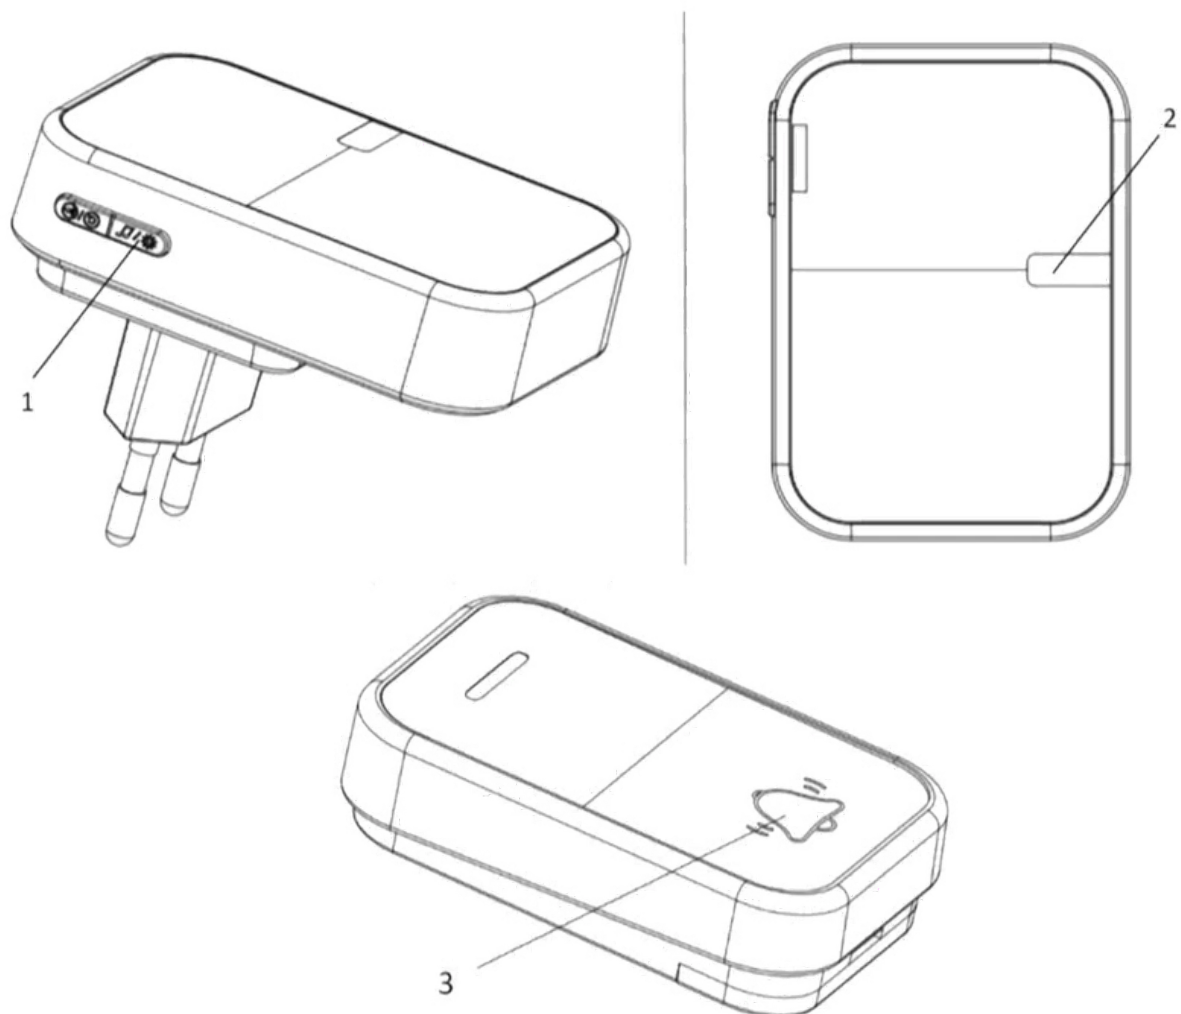


- 3 Press the transmitter button, the indicator light flashes once to indicate that the pairing is successful.

2. Clear the pairing: As shown in the picture, within 1 minute after the receiver is powered on, press and hold the pairing button until the light flashes 3 times to

 
clear all the pairing. Then press any button again and the light will turn off, indicating the clearing is completed.

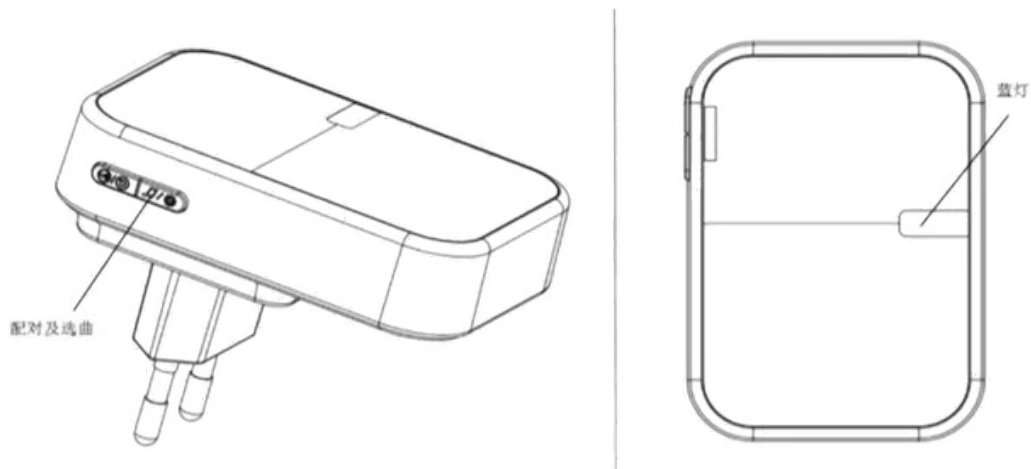

 
Return to the first chime: When the receiver is powered on, press and hold the volume button to return to the first chime.

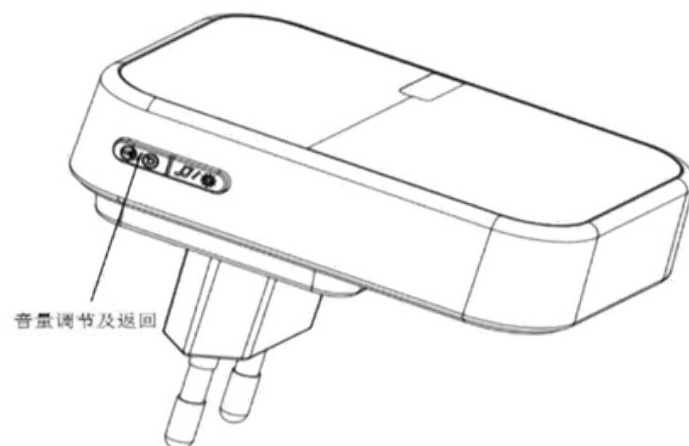

 4.Chime selection: When the receiver is powered on, press the chime selection button to change the chime among the built-in 38 chimes.

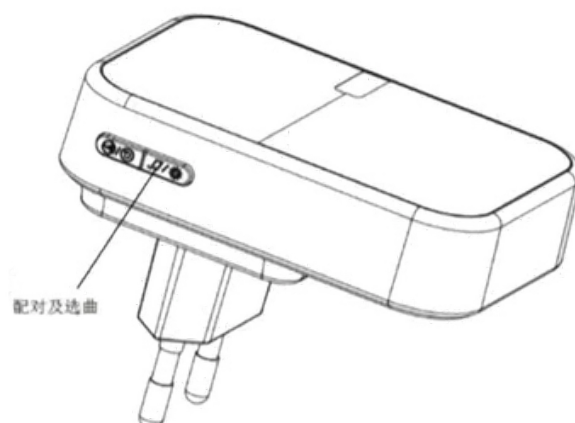


 5. Volume Control : When the receiver is powered on, press volume button to change the volume between large, medium, and low volume.

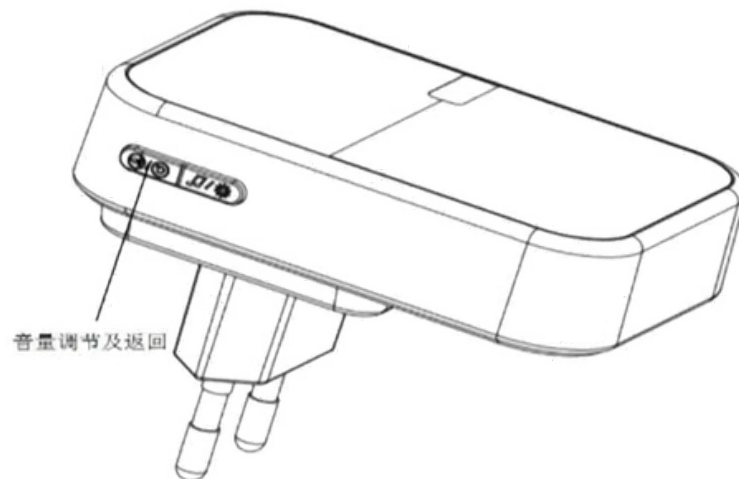


Transmitter Installation:

 1. Method 1 (Adhesive stickers) : As shown: stick one side of the double-sided stickers to the bottom of the transmitter, then stick the transmitter anywhere you like.

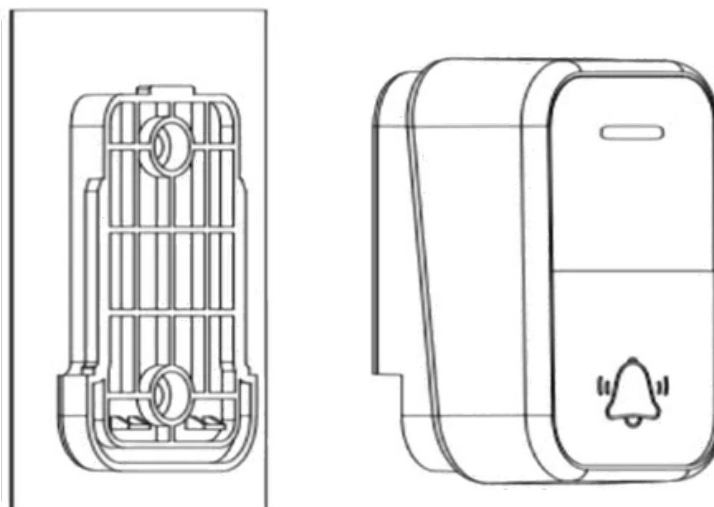

2. Method 2 (Screws):

 Put the bracket plate in the desired position and draw the anchor point. Use professional tools to punch holes on the wall and install rubber plugs to fix the bracket plate to the wall with screws, and then slide the transmitter in place.

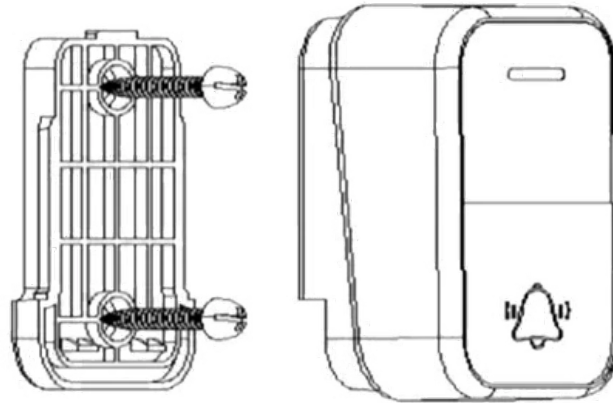

Failure analysis and troubleshooting:

1. Doorbell do not ring:

- a、 Check whether the receiver is plugged well, make sure the receiver is powered on.
- b、 Check whether the pairing is successful, try clearing the pairing and then re-pairing again.

2. Short transmission distance:

Metal objects such as iron doors and iron frames will affect the effective transmission distance. Avoid placing the transmitter and receiver near metal objects. Walls and ceilings also affect the transmission distance. Interference from other wireless devices, etc.